



Dimmer Series – Multi-Way Dimmer Switch

Product Features

- Multi-Function dimmer
- Available in Rotary or Push Button
- Suitable for multi-way dimming
- Dimmer with push ON/OFF switch
- Soft Start
- Fits most standard wall plates (excludes Clipsal Iconic)
- No Neutral Required
- Load: Min 5w / Max 350w
- Numerous programmable features (refer to following page)



Options:

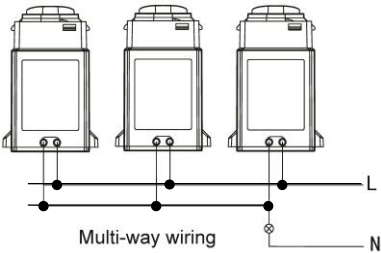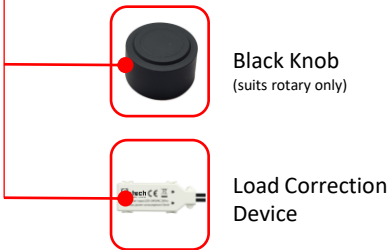

Specification Overview

Model	Type	Dimming Mode	Size	Max Load	Min Load	Comments
DIM-MW-R	Rotary	Trailing Edge	54.9 x 23.5 x 23.5mm	300w	5w	<u>Allows</u> for multi-way dimming
DIM-MW-P	Push	Trailing Edge	43.5 x 23.5 x 23.5mm	300w	5w	<u>Allows</u> for multi-way dimming
DIM-MW-R-BK	Matt Black Knob to suit DIM-MW-R Dimmer					
DIM-LCD	Load Correction Device					
						Used to reduce dimming issues/flickering

Product Specification



Dimmer Series – Multi-Way Dimmer Switch

Dimmer Functions

Function	Description
Get-up	The lights will gradually brighten from the minimum brightness level to the maximum brightness over 30 minutes
Fall asleep	The lights will gradually dim from the current brightness level until they turn off over 30 minutes
Brightness adjustment – Minimum	Sets the desired minimum brightness level
Brightness adjustment – Maximum	Sets the desired maximum brightness level
Indicator Light	Turn ON or OFF the indicator light on the dimmer
Disable Push Button	If you are using a wall switch to turn ON and OFF the lights, then use this setting to disable the push button
Switch/Memory Setting	Use this setting to change the brightness when the light is turned ON at the last dimming level when the light was turned off. (Default setting is for the lights to go to maximum brightness when switched on)
Three-step Dimming	This setting allows 3 set levels of brightness to be changed when the push button is pressed Push button enabled: Off > Minimum > 50% > Maximum Push button disabled: Minimum > 50% > Maximum
Factory Reset	If you need to reset the dimmer for any reason back to the factory default.