




Sensor Floodlight MMS Remote Control

Product Features

- Compatible with S-Tech Floodlight models:
FLA-SC100W-3C-MR
- Use to set-up sensor functions
- 54 x 116 x 13mm

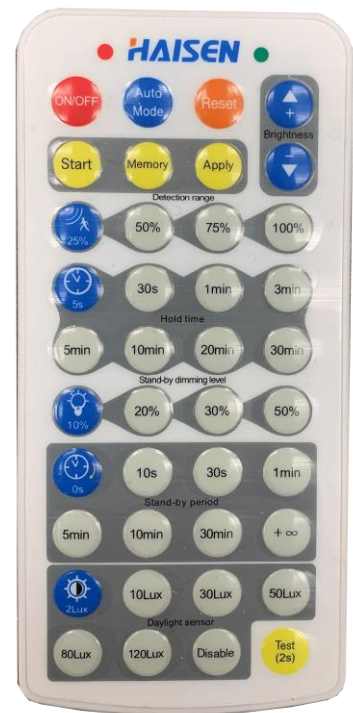


Specification Overview

Model	Power Requirement	Colour	Dimensions
FLA-SC-MR-REMOTE	2 x AAA Batteries	White	54 x 116 x 13mm

Product Specification



Sensor Floodlight MMS Remote Control

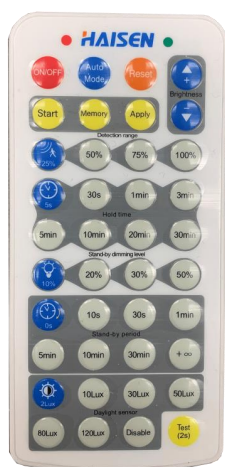

Parameter	Options
Detection Area	100% / 75% / 50% / 25%
Hold Time	5s / 30s / 1min / 3min / 5min / 10min / 20min / 30min
Daylight Threshold	Disabled / 120Lux / 80Lux / 50Lux / 30Lux / 10Lux / 2Lux
Stand-by Period	0s / 10s / 30s / 1min / 5min / 10min / 30min / +∞
Stand-by Dimming Level	10% / 20% / 30% / 50%


Red indicates factory settings programmed in the weatherproof batten

Full operating instructions can be found on the following page.



-tech
LED Technology

Model: FLA-SC-MR-REMOTE

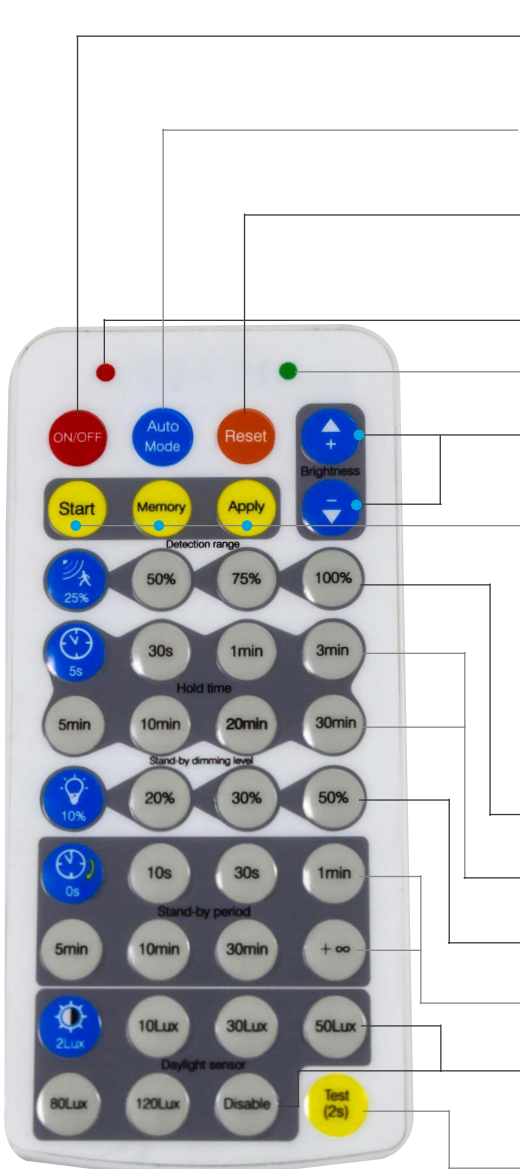

ON/OFF

1. "ON/OFF" key only functions as a switch of the light.
2. If press this button to turn off the lamp before it's short-circuited, the lamp will remain off after power-on again.

Auto Mode

Press "Auto Mode" button, the sensor starts to work and all settings remain the same before the light gets switched on/off.

Reset

1. Press "Reset" button, change brightness to max level.
2. Press "Reset" button, products with DIP switch will be controlled by DIP switches; otherwise all the setting will be just initial, that is 100% detection range, hold time 5S, no stand-by time and daylight threshold disabled.

Flick after press any button

Flick only after press "Apply" button

+/-

1. To adjust brightness 10-100% in on/off mode.
2. To adjust highest brightness 60-100% in sensor mode.

Start

Press "Start" to customize scene, users can change detection range, daylight threshold, holdtime, standby dimming level and standby period.

Memory

1. Press "Memory" to save all the settings.
2. The settings remained as the last time if not get reseted values.

Apply

1. Press "Apply" to deliver the saved setting.
2. Press "Apply" without "memory" will make all the setting one-time operation.
3. Settings should be done within 30S, otherwise it exits memory mode.



Detection area (Press to define detection area 100%/75%/50%/25%.)



Hold time (Press to define holdtime 5s/30s/1min/3min /5min/10min/20min/30min .)



Stand-by dimming level (Press to define stand-by dimming level 10%/20%/30%/50%.)



Stand-by period (Press to define stand-by period 0s/10s/30s/1min/5min/10min/30min/+∞.)

Note: "0s" means no standby period; "+∞" means unlimited standby period.



Daylight threshold (Press to define daylight level 2Lux/10Lux/30Lux/50Lux/80Lux/120Lux/Disable.)

Note: Disable means light will be turned on once sensor detects movement, regardless of the ambient lux.

Test (2s)

The button "Test (2s)" is for testing purpose after commissioning. Pressing this button, the sensor goes to test mode (hold time is only 2s)

Memory & Apply Mode

1. Press "ON/OFF button" to turn on the light or off.
2. To reset the parameters, Please follow the steps as below:
Step 1 - Press ON, to turn on the light if it was off at the start.
Step 2 - Press "Start" to the well-setting sensor.
Step 3 - Press the button of Detection range, Hold time, Stand-by dimming level, Stand-by period and Daylight threshold one after the other in sequence.
Step 5 – Press "Memory" to memorize the settings.

Note: The interval of each parameter setting shall be controlled within 30s.

3. To programme other lights in the array that have similar sensors to the same programme.
Step 1 - Press "ON" to the second sensor
Step 2 - Press "Apply"

Isolated Setting Mode

1. Press "ON/OFF button" to turn on the light or off. Press "Auto Mode", the remote will activate settings that were saved last or remain at the factory default settings.
2. To reset the parameters, Please follow the steps as below:
Step 1 - Press ON, to turn on the light if it was off at the start.
Step 2- Press any button of "Auto Mode", "Reset" , Test" and "Apply" to begin the sensor detection mode.
Step 3 - Press the button of Detection range, Hold time, Stand-by dimming level, Stand-by period and Daylight threshold one after the other in sequence.

Notes:

1. Settings will be saved automatically and remain until you press reset again.
2. Light will flicker when setting each parameter.