



Wireless Doorbell

Kinetic

Need more technical support?

Scan the QR code below for more
detailed user manuals



or contact us

Tel: 08 9330 8485

Email: support@s-tech.com.au

Wireless Doorbell

Switch to Excellence

Please read these instructions carefully in full prior to carrying out the installation

SAFETY ISSUES


IMPORTANT SAFETY ISSUES

- This product is designed for plug and play; the receiver is designed to be plugged into a standard Australian power point.
- The doorbell switch is rated to IP44 (splash proof) and suitable for indoor or outdoor (under cover) use. For full weather requirements (IP65) purchase one of the IP65 rated wireless switches in this series.
- The doorbell receiver is rated to IP20 and is not suitable for damp environments, do not disassemble the receiver or electric shock can occur.
- Modification of this product will void any warranty

Pairing & Reset

PAIRING

1. Install the receiver into a standard Australian power point
2. Press and hold the 🎵 button on top of the receiver for 3-4 seconds until the indicator light around the buttons begins to flash
3. Press the doorbell switch once to pair to the doorbell receiver
4. To add more doorbell switches to the receiver, follow the above procedure. A maximum of 10 switches can be paired with 1 receiver

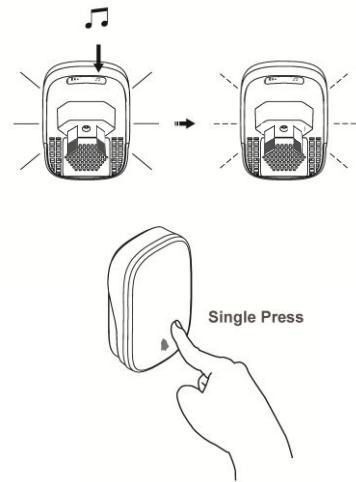

RESET

1. Press and hold the 🎵 button on top of the receiver for 6-7 seconds until the indicator light around the buttons turns OFF, this will remove all switches from the receiver memory.

Operation

Choose the ring tone

1. Single press the 🎵 button on top of the receiver to choose the ring tone (38 ringtones)



Adjust the Volume

1. Single press the 🔊 button on top of the receiver to adjust the volume (3 levels)

