

## **Product Features**

- Wireless Push Button
- NO power or batteries required
- Fits most standard wall plates (excludes Clipsal Iconic)
- Add a switch anywhere (no chasing walls, no cabling required)
- Pair Multiple Switches with the one receiver for multi-way switching and dimming
- Works together with the S-Tech range of Kinetic Wireless Receivers
- Range: ≤30m Indoor, ≤80m Outdoor



## **Specification Overview**



Model Type Dimensions Comments