


Surface Mount Frame Kits


Product Features


- Assemble yourself frames
- Powdercoated white to match T-Bar Panels
- Available to suit 300x600, 600x600, 300x1200, 600x1200 V4/V5 T-Bar Panels




Surface Mount Frame Kits

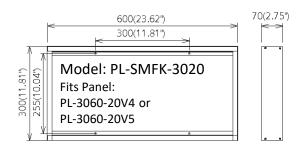

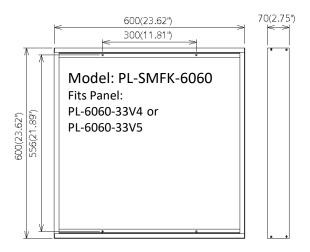

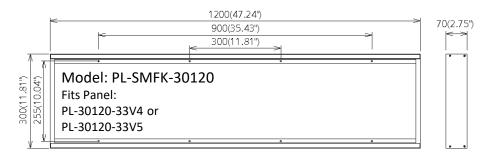


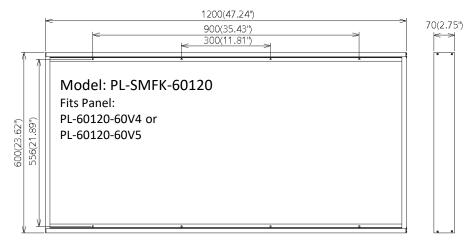


Specifications are subject to change without notice

- tech www.s-tech.com.au 08 9330 8485 updated Jul.2023


Surface Mount Frame Kits

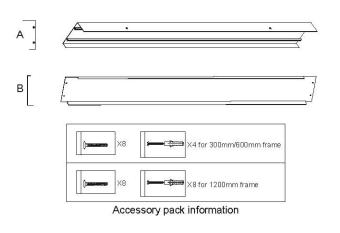


1. Unpack box and take out aluminum profile A - 2pcs, aluminum profile B - 2pcs, as well as accessory pack.

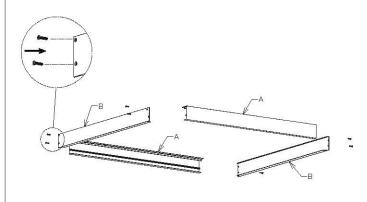


2. Assembling 3 pieces aluminum profile together with screw.

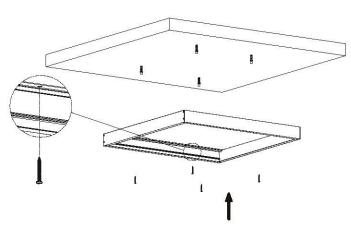


3. Fix semi-finished frame onto ceiling with screw(Concrete ceiling requires plastic anchor)

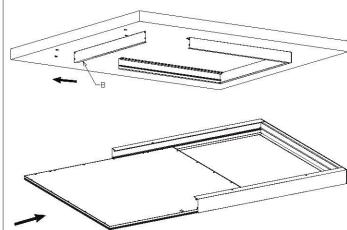

4. Slide panel into frame properly.

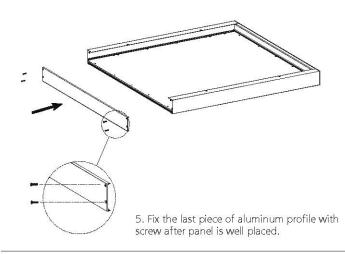

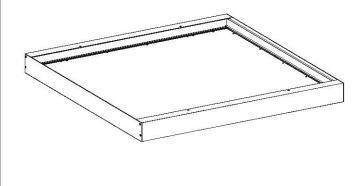

6. Switch on and check for correct operation

Specifications are subject to change without notice

